

Home & Business WiFi

WIRELESS ROUTER SETUP

FTTH PRODUCT

CONTACT DETAILS

JOHANNESBURG | CAPE TOWN | PORT ELIZABETH

SUPPORT DESK

010 004 0000 | 021 006 0000 | 041 006 0000 - option 1

support@amobia.com

SALES TEAM

010 004 0000 | 021 006 0000 | 041 006 0000 - option 2

🛛 sales@amobia.com

ACCOUNTS TEAM

010 004 0000 | 021 006 0000 | 041 006 0000 - option 3

accounts@amobia.com

CUSTOMER RELATIONS

customerrelations@amobia.com

ACCOUNT & ROUTER DETAILS

To proceed you will need to have your personal information sheet (containing items 1 to 5 listed below) on hand. These details have been emailed to you. Kindly contact us should you have any queries with regards to these details.

- 1 Wireless SSID
- 2 Wireless SSID2
- **3** Wireless Password
- 4 PPPoE User Name
- **5 PPPoE Password**

USEFUL INFORMATION

- 1 All Amobia client routers are shipped with the router setup to assist the client in enjoying the Internet with ease.
- 2 Please avoid pressing the reset button at the back of the router. This will clear all settings.
- **3** There are two wireless types of frequencies avaiable. 2.4Ghz and 5Ghz.
- 4 Only devices that have the ability to connect to 5Ghz will show the 5Ghz as available.
- 5 Connect to the 5Ghz if you require higher wireless connection speeds (30MBps and above).
- 6 Connect to the 2Ghz if the signal to the 5Ghz is weak, not available or your device is not 5Ghz compatible.
- 7 Please take note of the Information sheet provided that contains your account and network details.
- 8 Please do not remove or damage the fibre cable that is connected to the ONT. The fibre cable can easily be damaged by bending or pulling on the cable.
- 9 A call out fee will be charged by the Network provider to repair any damages to the fibre.

3 PART SETUP INSTRUCTIONS (PPPOE MODE)

Parts 2 and 3 of this document should only be followed if the router was accidently reset by the user or the router has lost the Amobia configuration.

If you don't know your internet settings user name and password, then please contact the Amobia Support Desk.

support@amobia.com

PART CONNECT YOUR 1 DEVICES

Connect the **Ethernet cable** with the **WAN (blue)** port of **Router(2)**. Then connect your computer with **LAN1/LAN2/LAN3** ports of **Router** by an Ethernet Cable. Physical connection as below:



2 CONFIGURE YOUR COMPUTER



It is advisable that you connect to your router for the first time using a network cable. You can use the cable provided between your ONT and router.

Right Click on **Network Connection Icon** on the system bar, then click on **Network & Internet Settings.**

Network & Internet settings Change settings, such as making a connection metered.			
<i>III</i>	Eliabt mode	(۱۵) Mobile	
WIFI	riight mode	noispot 11:12 AM 2020/04/07	Ţ

STEP 2

Under settings select **Ethernet** and click on **Change Adapter Options.**

IG WIFI	Related settigos
문 Ethernet	Change adapter options
ଳ Dial-up	Change advanced sharing options



Right click on **Ethernet / Local Area Connection** and then choose the **Properties** option.

Double click on Internet Protocol Version 4 (TCP/IPv4).

etworking Sharing Connect using:	E Family Controller	
This c <u>o</u> nnection uses th	ne following items:	<u>C</u> onfigure
Giert for Micro GoS Packet S GoS Packet S GoS Packet S Microsoft Netw Microsoft LLD Microsoft LLD Internet Protoc	soft Networks r Sharing for Microsoft icheduler sol Version 4 (TCP/IPv vork Adapter Multiplexo P Protocol Driver sol Version 6 (TCP/IPv	All
l <u>n</u> stall	<u>U</u> ninstall	P <u>r</u> operties
Description Transmission Control wide area network p across diverse interc	Protocol/Internet Proto rotocol that provides co onnected networks.	ocol. The default mmunication

STEP 5

Choose Obtain an IP address automatically and Obtain DNS server address automatically and then click "OK".

Internet Protocol Version 4 (TCP/IPv4) Properties		
General Alternative Configuration		
You can get IP settings assigned automatically if your network support this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.	s	
Obtain an IP address automatically		
Use the following IP address:		
IP address:		
Subnet mask:		
Default gateway:		
Obtain DNS server address automatically		
O Use the following DNS server addresses:		
Preferred DNS server:		
Alternative DNS server:		
Validate settings upon exit Advanced		
OK Can	cel	

Also click on "OK" on the previous Local Connection **Properties** window.

Ethernet Properties				
Networking Sharing				
Connect using:				
💭 Realtek PCIe GbE Family Controller				
Configure				
■ Internet Protocol Version 6 (TCP/IPv6)	~			
< 2				
Install Uninstall Properties				
Description Allows your computer to access resources on a Microsoft network.				
ОК Са	ncel			

PART SETUP YOUR 3 ROUTER

Open an Internet browser (Chrome, Firefox or Edge) then type 192.168.0.1 or http://tendawifi.com in the address bar. Press "Enter" to go to the homepage of the router. Then click "Start".

Select **PPPoE** from the drop down. Type your **username** and **password** provided by Amobia, then click "**Next**".

i lease sei	ect your connection type.
Detection timed out. P	lease select your connection type manually.
Connection Type:	PPPoE
ISP User Name:	client@amobia.co.za
ISP Password:	•••••
	Can't contain ~;8"% and space and Chinese character. The PPPoE user name and password have been imported from the original router.
-	Next

Setup the wireless name and password of your WiFi signal, then click **"Next".**

Setup completed. Your router will connect once you plug it into the **ONT.** Please select the **"More"** button on the next page.

If you want to improve WiFi speed, select **WiFi Settings** on the left menu bar.

- Select WiFi Name & Password & enable the 5.8Ghz channel
- Select Transmit Power. Adjust the 5.8Ghz channel transmit power to high
- Select Beamforming+ and enable for a better WiFi experience
- Select Anti-Interference and enable to improve the signal to devices

Some devices (laptops / phones) are not 5.8Ghz compatible. Adjust settings under **Channel & Bandwidth** if some devices experience slow speeds.

To ensure that Amobia can monitor faults on your line / link please disable Ignore Ping Packet from WAN Port under the Advanced Settings / Firewall.

Tenda	Advanced Settings		
🖀 Internet Status			(4)
Internet Settings	Bandwidth Control	Tenda App	Sleeping Mode
় ₩iFi Settings	Enable	Disable	Enable
Guest Network	\sum	$\overline{\bigcirc}$	TV
🖴 Parental Control	Filter MAC Address Blacklist	Firewall Enable	IPTV Enable
¥ VPN			\frown
🔧 Advanced Settings	DDNS	• • • • • • • • • • • • • • • • • • •	(DMZ)
③ System Settings	DDNS Enable	Virtual Server Not Configured	DMZ Host Disable
TCP Flood Attack Defer	nse:	et From WAN Port	Save

STEP 7

To set up the Remote Management for Amobia Assistance follow the following steps:

- Select the Systems Settings tab on the left menu bar
- Select Remote Management icon
- **Enable Remote Management**
- Enter **Remote IP Address:** 196.45.16.26
- Enter **Port:** 50081
- Click "Save"

Remote Management:	
Remote IP Address:	196.45.16.26
Port:	50081
	Save

Home & Business

amobia

www.amobia.com